

Osnovni podaci o konfiguraciji routera i LAN podešavanja

ADSL routeri se standardno isporučuju sa sledećim podešenim default parametrima:

Efficient Network Speedstream Router 5861, Siemens Speedstream 4100

Ruter DHCP Server:	ON (Uključen)
DHCP Pool:	192.168.254.2 - 192.168.254.253
LAN IP Adresa rutera:	192.168.254.254
IP mask:	255.255.255.0

Allied Telesyn AT-AR 255E Anex B (za ISDN tel. Priključke)

Ruter DHCP Server:	ON (Uključen)
LAN IP Adresa rutera:	192.168.1.1
IP mask:	255.255.255.0

ATU R130 Anex B, ATU R140 Anex B, ATU R130 POTS

Ruter DHCP Server:	ON (Uključen)
LAN IP Adresa rutera:	192.168.1.1
IP mask:	255.255.255.0

TP Link TD8840 POTS, TPLink TD8810 Anex B (za ISDN tel. Priključke)

Ruter DHCP Server:	ON (Uključen)
LAN IP Adresa rutera:	192.168.1.1
IP mask:	255.255.255.0

TP Link TD-W8901G POTS, TP Link TD-W8901GB (za ISDN tel. Priključke)

Ruter DHCP Server:	ON (Uključen)
DHCP Pool:	192.168.1.2 - 192.168.1.101
LAN IP Adresa rutera:	192.168.1.1
IP mask:	255.255.255.0

FritzBox POTS & ISDN router

Ruter DHCP Server:	ON (Ukljucen)
LAN IP Adresa rutera:	192.168.178.1
IP mask:	255.255.255.0

DHCP pool: od _____. ____ do _____. ____

JAVNA STATIČ	ČKA IP	Adresa*	:		

(samo za korisnike koji su uplatili ovu dodatnu ADSL uslugu)

U ruter je upisana vaša Username/Password kombinacija koju ste dali prilikom popunjavanja Formulara za registraciju ADSL naloga tako da će ruter po ispravnom povezivanju i po izvršenoj aktivaciji ADSL priključka sam ostvariti konekciju na **BeocityNet ADSL**.

LAN Podešavanje

Saglasno ovom standardnom (default) podešavanju rutera potrebno je na vašim računarima koji su priključeni na ruter direktno ili su na istoj LAN mreži s njim podesiti podesiti parametre njihove LAN konekcije prema sledećem:

Kliknite na *Start -> Settings -> Control Panel.* Izaberite *Network Connections*, a zatim Vašu mrežnu konekciju a zatim kliknite na : <u>P</u>roperties

ocal Area Conne	ection Status	
eneral Support		
Connection		
Status:		Connected
Duration:		04:08:15
Speed:		100.0 Mbps
Activity		
	Sent — 🛃	P Received
Packets:	61,531	78,749
Properties	Disable	
		Close



Obelezite Internet Protocol (TCP/IP) opciju prema gornjoj slici i izaberite njegove Properties. Izaberite sledeće podešavanje:

Internet Protocol (TCP/IP)	Properties 🛛 🛛 🛛 🔀
General Alternate Configuration	n]
You can get IP settings assigne this capability. Otherwise, you r the appropriate IP settings.	ed automatically if your network supports need to ask your network administrator for
Obtain an IP address auto	omatically
O Use the following IP addre	: :228
IP address:	
Subnet mask:	the second
Default gateway:	a. 6. a
Obtain DNS server addres	ss automatically
O Use the following DNS se	rver addresses:
Preferred DNS server:	
Alternate DNS server.	
	Advanced
	OK Cancel

I izbor potvrdite sa OK.

Napomena:

Ova podešavanja se odnose na podrazumevanu (default) konfiguraciju rutera u kojoj se isti isporučuje.

Za sve dodatne informacije stojimo Vam na raspolaganju

http://beocity.net | Tehnička podrška na 011 3033084