Uputstvo za konfigurisanje rutera SpeedStream 4100

Nakon što ste povezali ruter prema šemi koju ste dobili, da bi ste konfigurisali SpeedStream 4100 ruter, potrebno je da uradite sledeće:

Otvorite neki browser (Explorer, Firefox...), i u polju adress bar upišite sledeću adresu **192.168.254.254**, pritisnite **Enter**. Nakon toga interfejs rutera će Vam tražiti username i password, podrazumevani username: **admin**, password: **admin**. Na taj način ste pristupili podešavanju rutera, a sa leve strane se pojavljuje spisak linkova u konfiguraciji rutera. Idite na **Setup**, pa **WAN Interface**. Moguće je da će Vam ruter u ovom trenutku tražiti ponovo autorizaciju (user: admin, pass: admin). Nakon toga u desnom prozoru će se pojaviti tabela sa parametrima (*slika 1*). Klikom na polje **0/35**, ispod stavke **VC** (kursor će se na tom polju pretvoriti u šaku sa kažiprstom), pokrećete konfiguraciju (*slika 2*).

	SpeedStream	
		WAN Interface Configuration Wizard
4100	WAN Interface Configuration Wizard	Current Configuration
lome	Current Configuration	# VC Type Name Actions
.ogin	# VC Type Name Actions 0 8/35 PPPoE PPPoE 8/35 Disable Delete Image: Control of the state of the stat	0 0/35 PPPDE PPPOE 0/35 Disable Delete V
Setup	1	2
User Profiles WAN Interface	3	4
Host	5	6
Admin User Time Client	7	7
Static Routes	*Checked interface is the default WAN interface	"Checked interface is the default WAN interface
Port Forwarding Firewall	Add a New VC	Add a New VC

Slika 1

BeocityNet

Slika 2

U narednom koraku, potrebno je po potrebi uneti sledeće podatke: VPI: 8; VCI: 35; Encapsulation type: LLC; Traffic Class: Unspecified Bit Rate, dalje idete na Next (*slika 3*). Zatim u delu Protocol Selection, potrebno je da bude označeno polje: PPPoE, idite na Next (slika 4).

WAN Interface Configuration Wizard
ATM Settings
Enter the VPI and VCI numbers as specified by your service provider.
Select the Encapsulation Type: LLC VCMUX
Select the Traffic Class. Unspecified Bit Rate
Enter the desired Traffic Description information: (All Fields
Optional)
Peak Tx Cell Rate
Sustained Tx Cell Rate
IX Burst Tolerance
VC Type Name 0 0/35 PPPoE PPPoE 0/35
Cancel Next >> Finish

Slika 3

Slika 4

U narednom koraku, birate opciju **Client only**, i idete na **Next** (*slika 5*). Dalje, u prozoru **PPPoE Session Count**, birate broj **1**, i idete na **Next** (*slika 6*).

WAN Interface Configuration Wizard	WAN Interface Configuration Wizard
РРРоЕ Туре	PPPoE Session Count
© Client only © Bridge only © with 2684B Connection © with PPPoE Bridge	Select the number of PPPoE sessions to configure:
# VC Type Name 0 8/35 PPPoE PPoE 0/35 Cancel < Back Next >> Finish	# VC Type Name 0 8/35 PPPoE 0/35 Cancel < Back Next>> Finish

Slika 5

Slika 6

U sledećem koraku **User Information**, u polja **Username** i **Password**, upisujete Vaše korisničko ime i lozinku, kombinaciju koju koristite za pristup BeocityNet adsl servisu (*slika 7*). Napomena: username upisujete u formatu username@beocity. Idete na **Next**. U narednom prozoru (*slika 8*), potrebno je da bude štiklirano samo polje **Auto-Connect on Disconnect**, nakon ovoga konfiguracija rutera je završena, i možete kliknuti na opciju **Finish**.



Slika 7

Slika 8

BeocityNet

Konfiguracija će Vas vratiti na na početnu stranicu konfiguracije, samo što će sada u donjem delu tabele postojati tekst sa linkom za opciju **Reboot** (*slika 9*). Još jedanput će se pojaviti novi prozor sa opcijom **Reboot**, kliknite na nju, nakon toga će se ruter restartovati (*slika 10*). Sada je konfiguracija završena i možete da zatvorite browser i sacekati da se ruter restartuje.

WAN Interface Configuration Wizard	
Current Configuration	
# VC Type Name Actions 0 8/35 PPPoE PPPoE 8/35 Disable Delete ✓ 1 2 3 4 5 6 7 <t< th=""><th>Your settings have been saved.</th></t<>	Your settings have been saved.
*Checked interface is the default WAN interface Add a New YC A reboot is required before the new configuration takes effect	The new settings will not take effect until the Gateway is rebooted. If you would like to reboot the Gateway now, press the Reboot button below.
Slika 9	Slika 10

Pod uslovom da ste povezali i ispravno konfigurisali ruter, ispravnost se manifestuje tako sto su na ruteru uključene lampice **Power**, **Ethernet**, **DSL** i **Internet** (potrebno je da prođe 2-3 minuta od restarta rutera). Lampica **Activity** je nezavisna i odražava aktivnost samog rutera. Takodje, jedan od uslova je i da ste, sa strane BeocityNet servisa, obavešteni o aktivaciji ADSL usluge.